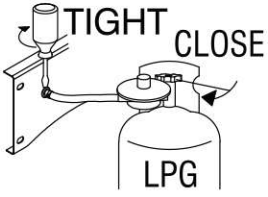
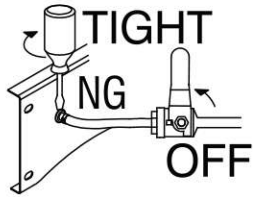
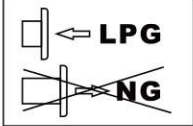
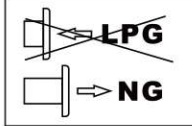

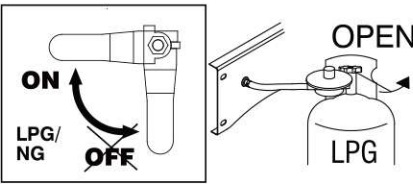
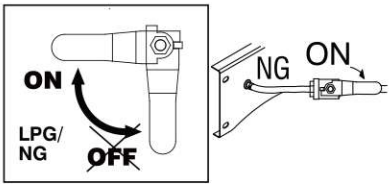
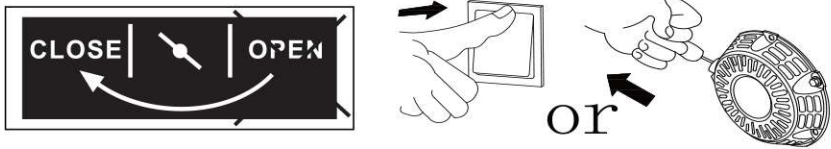

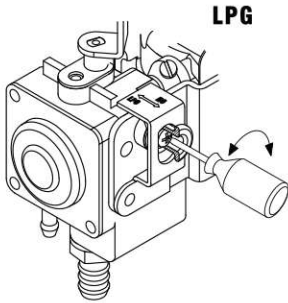



LPG/NG OPERATION MANUAL

FUEL:	LPG	NG
●CONNECT: MAKE SURE NO LEAKING		
●PRESSURE:	2.8-6Kpa	2.0-4.2Kpa
●FLOW RATE:	≥0.4kg/kw·h	≥0.4m³/kw.h
●LPG/NG:		
●FUEL SWITCH:		
●GAS SWITCH:		
●START:		
●RUNNING:		
●FLOW RATE ADJUSTMENT:		
●STOP THE ENGINE:	